



ESP-TM2 Controller User Manual



Introduction 2

Welcome to Rain Bird 2

Controller Features 2

Installation 2

Mount Controller 2

Wiring Connections 3

Connect Valves 3

Connect Master Valve (optional) 3

Connect Pump Start Relay (optional) 3

Connect Rain/Freeze Sensor (optional) 4

Connect Custom Wiring (optional) 4

Controls and Indicators 5

Special Features 5

Basic Programming 6

1. Set Date and Time 6

2. Set Watering Start Times 6

3. Set Station Run Times 6

4. Set Watering Days 6

Custom Days of the Week 6

Manual Watering Options 7

Test All Stations 7

Run a Single Station 7

Run a Single Program 7

Normal Operation 7

AUTO RUN 7

OFF 7

Advanced Programming 8

Odd or Even Calendar Days 8

Cyclic Days 8

Rain Sensor 8

Seasonal Adjust 8

Delay Watering 8

Permanent Days Off 9

Options 9

Reset Button 9

Remote Accessories 9

Troubleshooting 10

Watering Issues 10

Electrical Issues 10

Introduction

Welcome to Rain Bird

Thank you for choosing Rain Bird's ESP-TM2 controller. In this manual are step by step instructions for how to install and operate the ESP-TM2.




Controller Features

Feature	Description
Maximum Stations	12
Simultaneous Stations	1 plus master valve
Start Times	4
Programs	3
Program Cycles	Custom Days, Odd, Even and Cyclic
Permanent Days Off	Per program
Master Valve Control	On/Off per station
Rain Delay	Supported
Rain/Freeze Sensor	Supported
Rain Sensor Control	Global or by station
Seasonal Adjust	Global or by program
Manual Station Run	Yes
Manual Program Run	Yes
Manual Test All Stations	Yes
Station Advance	Yes
Short Detect	Yes
Delay Between Stations	Yes
Accessory Port	Yes (5 pin)
Save & Restore Programming	Yes


Installation

Mount Controller

- 1 Drive a mounting screw into the wall, leaving an 1/8 inch gap between the screw head and the wall surface (use the supplied wall anchors if necessary), as shown.
- 2 Locate the keyhole slot on back of the controller unit and hang it securely on the mounting screw.

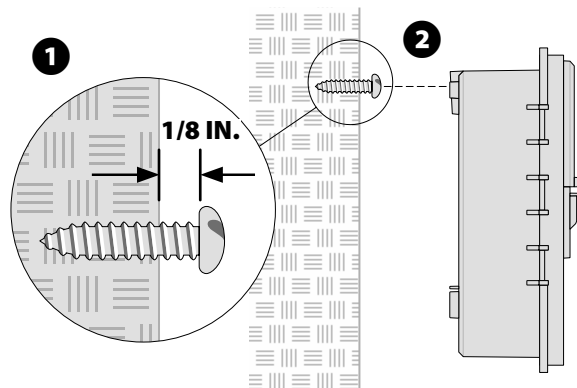


- 3 Remove the wiring bay cover on the lower part of the controller unit, and drive a second screw through the open hole inside the controller and into the wall, as shown.

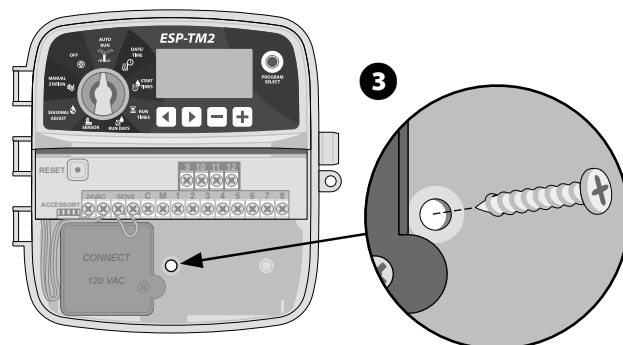

NOTE: Choose a suitable mounting location close to a 120 VAC wall outlet.

Connect Valves


- NOTE:** The ESP-TM2 controller supports one valve solenoid per station terminal.

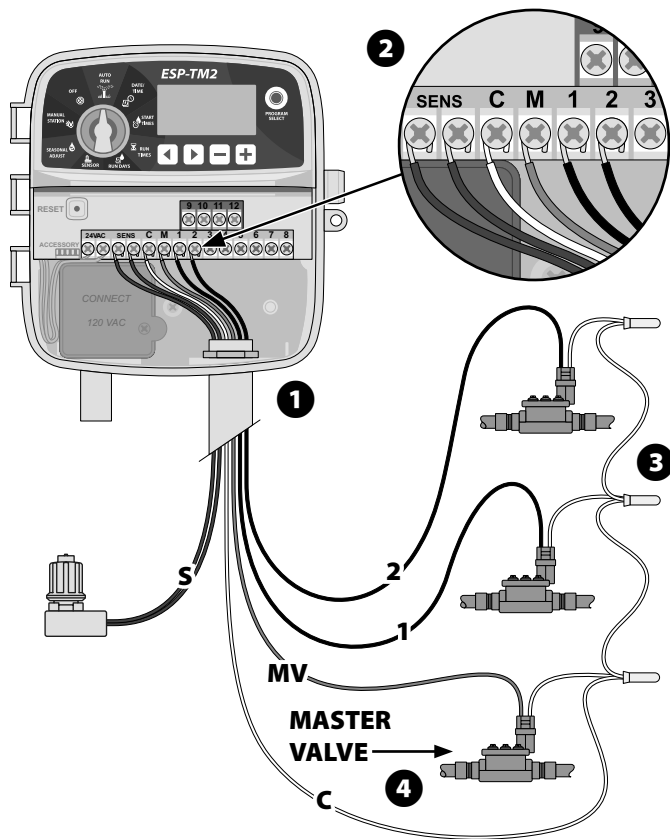

- 4 Connect a wire from the master valve (M) to the master valve terminal (M) on the controller. Then connect the remaining wire from the master valve to the field common wire, as shown.

The ESP-TM2 can control a pump start relay, to turn the pump on and off as needed.

- 1 Connect a wire from the pump start relay (PSR) to the master valve terminal (M) on the controller. Then connect another wire from the pump start relay to the field common wire, as shown.
- 2 To avoid the possibility of damage to the pump, connect a short jumper wire from any unused terminal(s) to the nearest terminal in use, as shown.

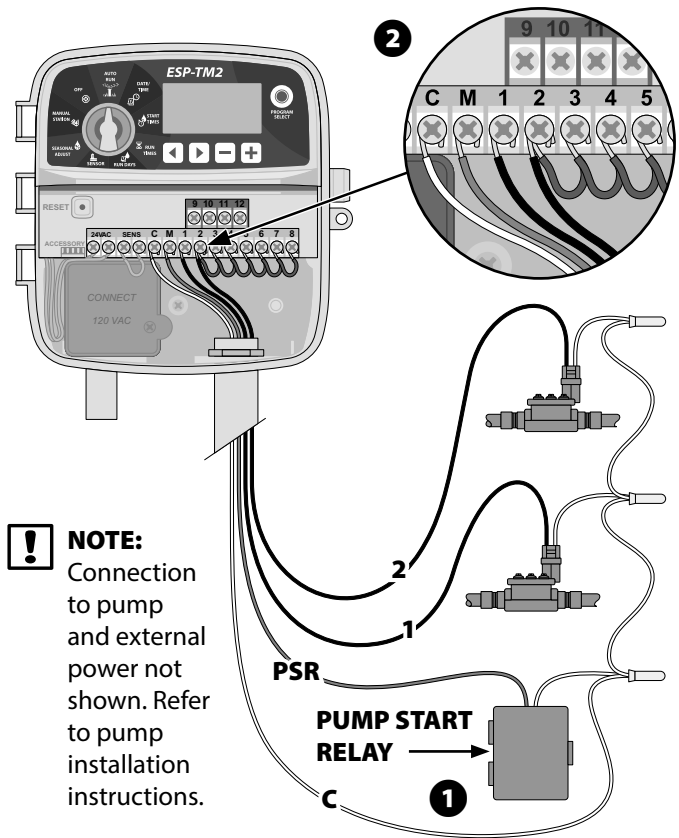

- NOTE:** The ESP-TM2 controller DOES NOT provide power for a pump. The relay must be wired according to manufacturer instructions.

Only the following Rain Bird pump start relay models are compatible with the ESP-TM2:


Description	Model #	Volts
Universal Pump Relay	PSR110IC	110V
Universal Pump Relay	PSR220IC	220V

Connect Rain/Freeze Sensor (optional)

The ESP-TM2 controller can be set to obey or ignore a rain sensor.

Refer to the Rain Sensor section under Advanced Programming.

- 1 Remove the yellow jumper wire from the SENS terminals on the controller.
- 2 Connect both rain sensor wires to the SENS terminals, as shown.

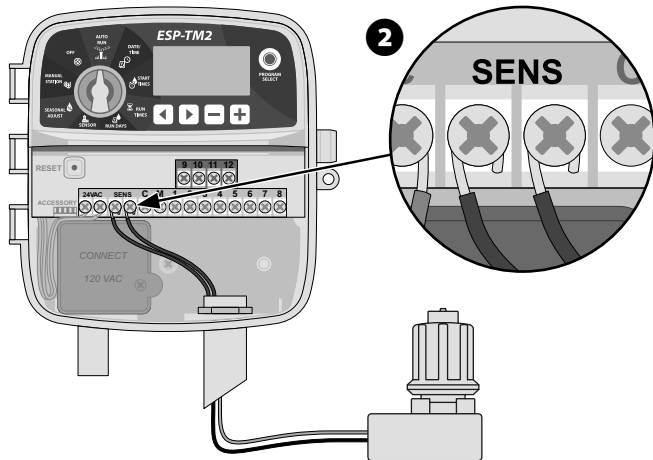

NOTE: Do not remove the yellow jumper wire unless connecting a rain sensor.

NOTE: Rain Bird controllers are only compatible with normally closed rain sensors.

NOTE: For wireless rain/freeze sensors, refer to installation instructions for sensor.


WARNING: Do not apply power until you have completed and checked all wiring connections.

Connect Custom Wiring (optional)

If desired, the provided 120 volt power cord can be removed and replaced with a custom wiring.

To remove the factory installed power cord and connect custom wiring:

- 1 Ensure that AC power is disconnected.
- 2 Remove the controller junction box cover and disconnect the power cord to the unit.
- 3 Remove the factory installed power cord by loosening the 2 screws securing the metal strain-relief bar, as shown.
- 4 Connect the external power supply wires using the wire nuts and then re-secure the metal strain relief bar by tightening the 2 screws.

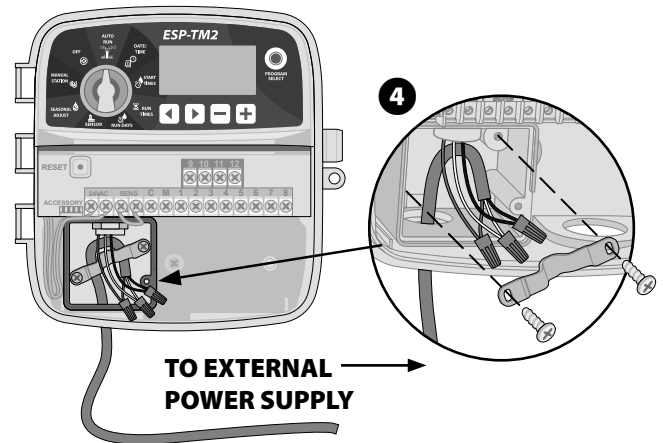

Power Wiring Connections (120VAC)

Black supply wire (hot) to the black transformer wire
White supply wire (neutral) to the white transformer wire
Green supply wire (ground) to the green or green-yellow transformer wire


- 5 Verify that all wiring connections are secure and then replace the junction box cover.

CAUTION: The strain-relief bar must be re-secured for the unit to function properly.

WARNING: DO NOT apply power until you have completed and checked all wiring connections.

Controls and Indicators

Turn the dial to select programming features.

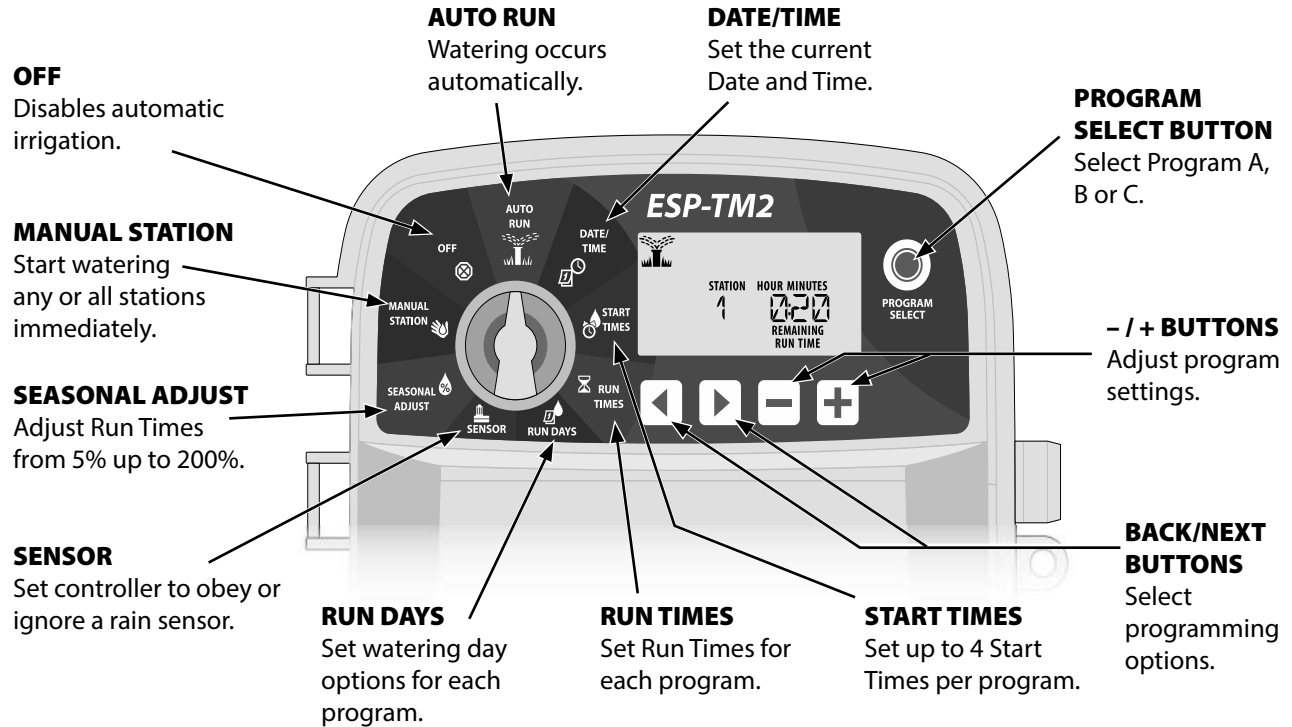

Special Features

- Turn the dial to the desired position.
- Press and hold ◀ and ▶ at the same time.

SET INTERSTATION DELAY

A station delay (from 1 second to 9 hours) ensures that a valve has completely closed before the next one opens.

RESET TO FACTORY DEFAULTS

All programmed schedules will be erased.

SET RAIN SENSOR BYPASS BY STATION

Tells a station to obey or ignore a rain sensor.

SAVE PROGRAMMING

RESTORE PROGRAMMING

SET MASTER VALVE BY STATION

Allows a station to be controlled by a master valve or pump start relay.

SET TO ODD, EVEN OR CYCLIC WATERING

See Advanced Programming.

Basic Programming

1 Set Date and Time



Turn the dial to **DATE/TIME**.

- Press ◀ or ▶ to select the setting to change.
- Press – or + to change the setting value.
- Press and hold – or + to accelerate adjustments.

To change the time format (12 hour or 24 hour):

- With **MINUTES** blinking, press ▶.
- Press – or + to select the desired time format, then press ▶ to return to the time setting.

2 Set Watering Start Times

Up to four Start Times are available for each program.



Turn the dial to **START TIMES**.

- Press **Program Select** to choose the desired Program (if necessary).
- Press ◀ or ▶ to select an available Start Time.
- Press – or + to set the selected Start Time (ensure the AM/PM setting is correct).
- Press ▶ to set additional Start Times.

3 Set Station Run Times

Run Times can be set from one minute up to six hours.



Turn the dial to **RUN TIMES**.

- Press **Program Select** to choose the desired Program (if necessary).
- Press ◀ or ▶ to select a Station.
- Press – or + to set the Run Time for the selected Station.
- Press ▶ to set additional Station Run Times.

4 Set Watering Days

Custom Days of the Week

Set watering to occur on specific days of the week.



Turn the dial to **RUN DAYS**.

- Press **Program Select** to choose the desired Program (if necessary).
- Press – or + to set the selected (blinking) day as either **ON** or **OFF**, and to automatically move to the next day.
- You can press ◀ or ▶ at any time to move the cursor to the previous or next day.



CAUTION: If Sunday is selected, ▶ will enter and activate Cyclic Watering (see the Advanced Programming section). If this is not desired, press the ◀ button to return to watering by Custom Days.

Manual Watering Options

Test All Stations

Start watering immediately for all programmed stations.

 Turn the dial to **MANUAL STATION**.

- Press **—** or **+** to set a Run Time.
- Press and hold **▶** or turn the dial to **AUTO RUN** to start manual station test.

Run a Single Station

Start watering immediately for a single station.

 Turn the dial to **MANUAL STATION**.

- Press **▶** to display the MANUAL STATION screen.
- Press **◀** or **▶** to select a Station.
- Press **—** or **+** to set a Run Time.
- Press and hold **▶** or turn the dial to **AUTO RUN** to start the selected Station.

Run a Single Program


Start watering immediately for one program.

 Turn the dial to **AUTO RUN**.

- Press **Program Select** to choose the desired Program (if necessary).
- Press and hold **▶** to start the selected Program.

During Manual Watering:

The display shows a blinking sprinkler symbol, the active Station Number or Program, and the Remaining Run Time.

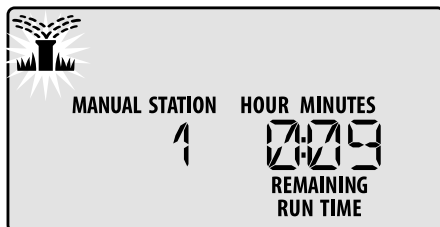


- To cancel manual watering, turn the dial to **OFF** for three seconds until the screen shows OFF.

Normal Operation

AUTO RUN

During watering, the display shows a blinking sprinkler symbol, the current Program and the Remaining Run Time.

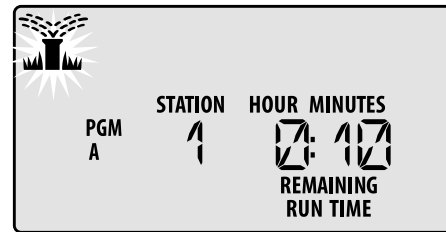

OFF

Turn the dial to  **OFF** to stop automatic irrigation or to cancel all active watering immediately.

 **CAUTION:** Watering will NOT occur if the controller remains in **OFF**.

Advanced Programming

Odd or Even Calendar Days

Set watering to occur on all **ODD** or **EVEN** calendar days.

 Turn the dial to **RUN DAYS**.


- Press **Program Select** to choose the desired Program (if necessary).
- Press and hold ◀ and ▶ at the same time until **ODD** or **EVEN** is displayed.

Cyclic Days

Set watering to occur at specific intervals, such as every 2 days, or every 3 days, etc.

 Turn the dial to **RUN DAYS**.

- Press **Program Select** to choose the desired Program (if necessary).
- On the **Custom Days** screen, press ▶ until the **Cyclic** screen is displayed (after SUN).
- Press — or + to set the desired DAY CYCLE, then press ▶
- Press — or + to set the DAYS REMAINING before the cycle begins. The NEXT watering day updates on the display to indicate the day that watering will start as shown.

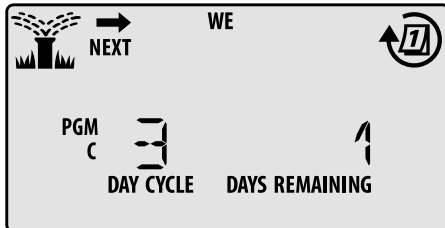

Rain Sensor

Set the controller to obey or ignore a rain sensor.

When set to **ACTIVE**, automatic irrigation will be suspended if rainfall is detected. When set to **BYPASS** all programs will ignore the rain sensor.

 Turn the dial to **SENSOR**.

- Press — or + to select **ACTIVE** (obey) or **BYPASS** (ignore).

 **NOTE:** See **Special Features** to set Rain Sensor Bypass by Station.

Seasonal Adjust

Increase or decrease program run times by a selected percentage (5% to 200%).

Example: If the Seasonal Adjust is set to 100% and the station Run Time is programmed for 10 minutes, the station will run for 10 minutes. If the Seasonal Adjust is set to 50%, the station will run for 5 minutes.

 Turn the dial to **SEASONAL ADJUST**.


- Press — or + to increase or decrease the global percentage setting.
- To adjust an individual Program, press **Program Select** to choose the desired Program (if necessary).

Delay Watering

Suspend watering for up to 14 days.

 Turn the dial to **AUTO RUN**, then press and hold +

- Press — or + to set the DAYS REMAINING. The next watering day will update on the display to indicate when watering will resume.

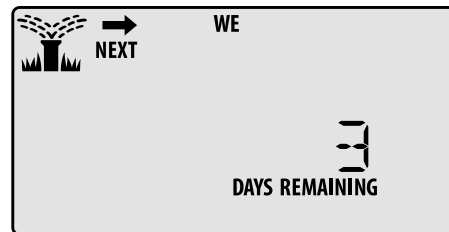

- To cancel a Rain Delay, set the DAYS REMAINING back to 0.

 **NOTE:** When the delay expires, automatic irrigation resumes as scheduled.

Permanent Days Off

Prevent watering on selected days of the week (for Odd, Even or Cyclic programming only).

 Turn the dial to **RUN DAYS**.

- Press **Program Select** to choose the desired Program (if necessary).
- Press and hold **Program Select**.
- Press **—** to set the selected (blinking) day as a Permanent Day Off or press **+** to leave the day **ON**.




Options

Reset Button


*If the controller is not working properly, you can try pressing **RESET**.*

- Insert a small tool such as a paper clip, into the access hole and press until the controller is reset. All previously programmed watering schedules will remain stored in memory.

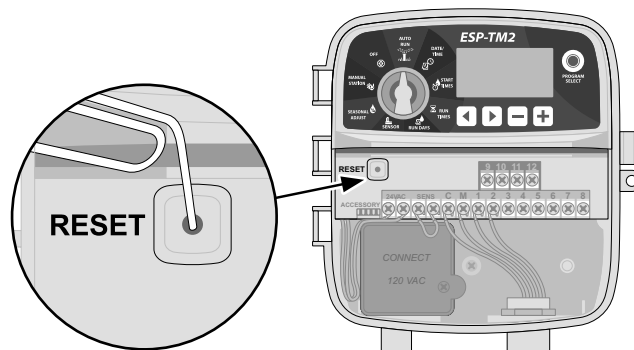

Remote Accessories

A 5 pin accessory port is available for Rain Bird approved external devices.

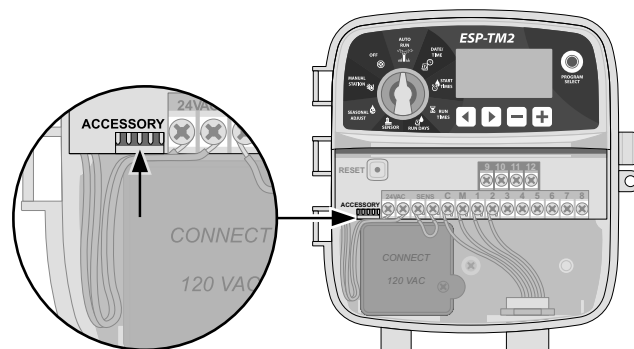

Troubleshooting

Watering Issues

Problem	Possible Cause	Possible Solution
Watering icon on the display is flashing, but the system is not watering 	Water supply issue.	Verify there is no disruption to the main water line and that all other water supply lines are open and functioning.
	Wiring is loose, not properly connected or damaged.	Check that wiring is securely connected at the controller and in the field. Check for damage and replace if necessary. Check wiring connections and replace with watertight splice connectors if needed.
Automatic and/or Manual Watering will not start	Connected rain sensor may be activated.	Let the rain sensor dry out or else disconnect it from the controller terminal block and replace it with a jumper wire connecting the two SENS terminals.
	Jumper wire connecting the two SENS terminals may be missing or damaged.	Jumper the two SENS terminals on the controller terminal block by connecting them with a short length of 14 to 18 gauge wire.
	Solenoid or master valve is shorted.	Confirm short message on the display. Correct the issue in the wiring. Clear the message by testing watering at the shorted valve or by pressing the ► button.
Excessive watering	Programs may have multiple start times that were set unintentionally	Programs (A, B or C) only require a single start time in order to run. Separate start times are not required for each valve.

Electrical Issues

Problem	Possible Cause	Possible Solution
Display is blank.	Power not reaching the controller.	Verify the main AC power supply is securely plugged in or connected and working properly.
		Verify the orange power supply wires are connected to the controller "24 VAC" terminals.
Display is frozen and controller will not accept programming.	An electrical surge may have interfered with the controller's electronics.	Unplug the controller for 2 minutes, then plug it back in. If there is no permanent damage, the controller should accept programming and resume normal operation.
		Press and release the RESET button.

Safety Information

 **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacity, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 **WARNING:** Special precautions must be taken when valve wires (also known as station or solenoid wires) are located adjacent to, or share a conduit with other wires, such as those used for landscape lighting, other "low voltage" systems or other "high voltage" power.

Separate and insulate all conductors carefully, taking care not to damage wire insulation during installation. An electrical "short" (contact) between the valve wires and another power source can damage the controller and create a fire hazard.

 **WARNING:** All electrical connections and wiring runs must comply with local building codes. Some local codes require that only a licensed or certified electrician can install power. Only professional personnel should install the controller. Check your local building codes for guidance.

 **CAUTION:** Use only Rain Bird approved accessory devices. Unapproved devices may damage the controller and void warranty.

For a list of compatible devices go to: www.rainbird.com

Disposal of Electronic Waste

 In compliance with European Directive 2002/96/CE and EURONORM EN50419:2005, this device must not be thrown away with household garbage. This device must be the object of an appropriate, selective removal procedure in order to recuperate it.

 **NOTE:** Date and time are retained by a lithium battery which must be disposed of in accordance with local regulations.

Questions?

Scan the QR code  to visit www.rainbird.com/esptm2 for help setting up and operating the Rain Bird ESP-TM2 Controller



Call Rain Bird toll free Technical Support at **1-800-724-6247** (USA and Canada only)



FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by Rain Bird Corporation could void the user's authority to operate the equipment. This product was FCC certified under test conditions that included the use of shielded I/O cables and connectors between system components. To be in compliance with FCC regulations, the user must use shielded cables and connectors and install them properly.
- This class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.
Cet appareil Numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Rain Bird Corporation

970 W. Sierra Madre
Azusa, CA 91702
USA
Tel.: (626) 963-9311

Rain Bird International, Inc.

145 North Grand Avenue
Glendora, CA 91741
USA
Tel.: (626) 963-9311

Rain Bird Europe

900, rue Ampère, B.P. 72000
13792 Aix en Provence
CEDEX 3 FRANCE
Tel.: (33) 4 42 24 44 61

Technical Services for

U.S. and Canada only:
1 (800) RAINBIRD

© 2016 Rain Bird Corporation
® Registered trademark of Rain Bird Corporation

www.rainbird.com www.rainbird.eu

690299-01 Rev.05/16



Homeowner WiFi Setup

Program your irrigation controller from anywhere, anytime!

1 Ensure strong WiFi signal strength at the controller.

NOTE: Ensure that you are using the 2.4GHz frequency WiFi channel (5.0GHz not compatible) and 802.11 b/g/n router.



NOTE: If necessary, improve signal strength by moving the router closer or using a signal booster.


2 Download the Rain Bird Mobile App




3 Press the button on the LNK WiFi Module. The light blinks GREEN and RED to indicate hotspot mode.



4 Locate and connect to the Rain Bird network in the phone/tablet's WiFi settings menu.

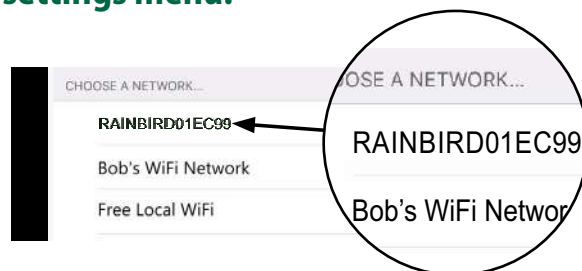

5 Open Rain Bird app and select Add Controller (bottom left of screen), then follow Setup Wizard

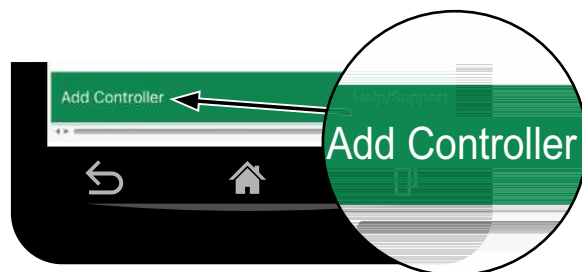

NOTE: Information you will need for setup

- WiFi network name (SSID)
- WiFi network password
- Email address
- Residence Zip Code

Scan this QR code or visit wifi-pro.rainbird.com/support to watch setup and support videos.



The Rain Bird Mobile App

Return to Login Screen

Send access invitations, add/remove controllers, or view all controllers

Edit Timer Name

Change the designated name of the timer.

Next Scheduled Event

View Zone, Start Time and Run Time of the next scheduled irrigation event.

Home Tab

Return to the Application Home screen

Weather Tab

Display 5-day Forecast

WiFi Tab

Measure WiFi signal strength at the controller. RSSI values larger than -70 (-70's, -80's or -90's) indicate need for signal booster.

Seasonal Adjust %

View automatic seasonal watering adjustment

Add/Remove Program

Click to add or remove a Program from the schedule

Add/Remove Zone

Click to add or remove a Zone from the schedule

Manually Water Zone

Choose a Zone to start watering immediately

Save Changes

View Today's Weather Forecast

Manual Water Delay

Up to 14 day delay

Rain Sensor

Activate or Bypass

Edit Program

Activate Auto Seasonal Adjust, change watering schedule

Settings

Update app notifications, network settings, controller passwords, and smart home options

Calendar View of Watering Schedule

View the watering schedule in convenient calendar form

